

lawnbox Grass Guard™ DG

SPREADER SETTINGS

SPREADER MODEL	LOW RATE 10.0 lbs/1,000 sq. ft.	HIGH RATE 12.5 lbs/1,000 sq. ft.
The Andersons Pacer Pro	16	20
The Andersons LCO-1000	S 1/2	U
The Andersons Yard Star 2150	22 1/2	24
Agri-Fab Broadcast (1-10)	10	7 (2 passes)
Brinly 20 Series Push Broadcast (0-30)	22 1/2	24
Chapin Broadcast (0-30)	22 1/2	24
Craftsman Broadcast (1-10)	10	7 (2 passes)
EarthWay Broadcast (0-30)	22 1/2	24
EarthWay 3400 Hand Spreader (1-3)	3 (2 passes)	3 (2 passes)
Echo Broadcast (2-15)	10 1/2	12
Lesco Broadcast (5-23)	18	19
Precision Broadcast (1-10)	10	7 (2 passes)
Scotts Broadcast (2-15) (Includes EdgeGuard, Elite, Standard, Basic, LawnPro & Speedy Green 1000 - 3000)	10 1/2	12
Scotts Wizz Hand Broadcast Spreader	9	7
Scotts Hand-Held Broadcast (Handy Green, Easy)	5 (2 passes)	5 (2 passes)
Spyker Broadcast	7.5	8

Note: These spreader settings were established using standard equipment available from the spreader manufacturer at swath widths and speeds typically used within the industry. Many variables such as walking speed, terrain, particle size, density, and spreader condition can affect these settings. These suggested settings are estimations based on past experience and testing. They are not intended to replace calibration.

lawnbox Grass Genie®

SPREADER SETTINGS

SPREADER MODEL	RATE 6.4 lbs/1,000 sq. ft.
The Andersons Pacer Pro	14
The Andersons LCO-1000	P
The Andersons Yard Star 2150	18
Agri-Fab Broadcast (1-10)	7 1/4
Brinly 20 Series Push Broadcast (0-30)	18
Chapin Broadcast (0-30)	18
Craftsman Broadcast (1-10)	7 1/2
EarthWay Broadcast (0-30)	18
EarthWay 3400 Hand Spreader (1-3)	3
Echo Broadcast (2-15)	7 1/4
Lesco Broadcast (5-23)	15
Precision Broadcast (1-10)	7
Scotts Broadcast (2-15) (Includes EdgeGuard, Elite, Standard, Basic, LawnPro & Speedy Green 1000 - 3000)	7 1/4
Scotts Wizz Hand Broadcast Spreader	8
Scotts Hand-Held Broadcast (Handy Green, Easy)	5
Spyker Broadcast	6.4

Note: These spreader settings were established using standard equipment available from the spreader manufacturer at swath widths and speeds typically used within the industry. Many variables such as walking speed, terrain, particle size, density, and spreader condition can affect these settings. These suggested settings are estimations based on past experience and testing. They are not intended to replace calibration.

lawnbox[®] Lawn Luxe[®]

SPREADER SETTINGS

SPREADER MODEL	RATE 5.6 lbs/1,000 sq. ft.
The Andersons Pacer Pro	14
The Andersons LCO-1000	0 1/2
The Andersons Yard Star 2150	17 1/2
Agri-Fab Broadcast (1-10)	7 1/4
Brinly 20 Series Push Broadcast (0-30)	17 1/2
Chapin Broadcast (0-30)	17 1/2
Craftsman Broadcast (1-10)	7 1/4
EarthWay Broadcast (0-30)	17 1/2
EarthWay 3400 Hand Spreader (1-3)	3
Echo Broadcast (2-15)	7 1/4
Lesco Broadcast (5-23)	14 1/2
Precision Broadcast (1-10)	6 3/4
Scotts Broadcast (2-15) (Includes EdgeGuard, Elite, Standard, Basic, LawnPro & Speedy Green 1000 - 3000)	7 1/4
Scotts Wizz Hand Broadcast Spreader	7 3/4
Scotts Hand-Held Broadcast (Handy Green, Easy)	4 3/4
Spyker Broadcast	6.2

Note: These spreader settings were established using standard equipment available from the spreader manufacturer at swath widths and speeds typically used within the industry. Many variables such as walking speed, terrain, particle size, density, and spreader condition can affect these settings. These suggested settings are estimations based on past experience and testing. They are not intended to replace calibration.

lawnbox Fall Fix™

SPREADER SETTINGS

SPREADER MODEL	RATE 5.0 lbs/1,000 sq. ft.
The Andersons Pacer Pro	13
The Andersons LCO-1000	0
The Andersons Yard Star 2150	17
Agri-Fab Broadcast (1-10)	7
Brinly 20 Series Push Broadcast (0-30)	17
Chapin Broadcast (0-30)	17
Craftsman Broadcast (1-10)	7
EarthWay Broadcast (0-30)	17 1/2
EarthWay 3400 Hand Spreader (1-3)	3
Echo Broadcast (2-15)	7
Lesco Broadcast (5-23)	14 1/2
Precision Broadcast (1-10)	5
Scotts Broadcast (2-15) (Includes EdgeGuard, Elite, Standard, Basic, LawnPro & Speedy Green 1000 - 3000)	7
Scotts Wizz Hand Broadcast Spreader	7 1/2
Scotts Hand-Held Broadcast (Handy Green, Easy)	4 1/2
Spyker Broadcast	6

Note: These spreader settings were established using standard equipment available from the spreader manufacturer at swath widths and speeds typically used within the industry. Many variables such as walking speed, terrain, particle size, density, and spreader condition can affect these settings. These suggested settings are estimations based on past experience and testing. They are not intended to replace calibration.